



INSTALLATION INSTRUCTIONS

- On the rear of the ATLAS 550 chassis, remove the cover plate covering the slot into which the option module carrying the VCOM Resource Module is to be inserted.

If the ATLAS 550 option module is already in the ATLAS 550 chassis, simply loosen the thumbscrews at both edges of the option module faceplate and slide the module out of the chassis.
- Carefully align the P10 connector on the VCOM Resource Module with the J10 connector on the option module.

Using only fingertip pressure so that neither circuit board bends or flexes, ensure that the connectors are firmly seated.

Secure the opposite end of the VCOM Resource Module to the option module using the screws and standoff posts supplied.
- Slide the option module with the VCOM Resource Module attached into the ATLAS 550 chassis until the module is positioned firmly against the front of the chassis.
- Fasten the thumbscrews at both edges of the option module faceplate. Tighten with a screwdriver.
- Install any additional modules into the base unit as specified in the Installation chapter of the ATLAS 550 User Manual.

Modules

Slot
Type
VCOM Menu
Alarm
Test
State
Status
Rev

Online
Offline

Info	Part Number
	Serial Number
	Assembly Revision
	Firmware Revision
Status	Device
	State
	Algorithm
	Silence
	Connection
	Frame Type
Config	Device
	State
Statistics	Device
	Usage Time
	ATLAS Frms
	ATLAS Drop
	VCOM Frms
	VCOM Drop
	Clear
	Reloads
FAX Capability	Enable/Disable FAX Capability
	Current FAX Status

MENU TREE

