



MENU TREE

Modules	Sit		Part Number	
			Serial Number	
			Assembly Revision	
			Firmware Revision	
			Processor ID	
	FXS Menu	Info	Port	
			Status	
	Alarm	Status	Rx ABCD	
			Tx ABCD	Port
	Test (shortcut)	Test		Test 2W
			Tx ABCD	
State	Offline		1kHz Tone	
	Online	Configuration	Loopback	
Status		Port		
Rev		Port Name		
		Rx Gain	0 dB through -6 dB	
		Tx Gain	3 dB through -6 dB	
		2W Impedance	600 +2.16μ	
		Coding Scheme	μ-law	

NETWORK CONNECTION PINOUT

Pin	Name	Description
1, 2, 3, 6, 7, 8	Unused	n/a
4	Ring	Ring to and from the analog phone interface
5	Tip	Tip to and from the analog phone interface

INSTALLATION INSTRUCTIONS

1. Remove the cover plate from the appropriate option slot in the ATLAS 550 rear panel.
2. Slide the Octal and Quad FXS Modules into the option slot until the module is firmly positioned against the front of the chassis.
3. Secure the thumbscrews at both edges of the module. Tighten with a screwdriver.
4. Connect the cables to the associated device(s).
5. Complete installation of remaining modules and Base Unit as specified in the Installation chapter of the ATLAS 550 System Manual.