



DSU 56/64 Switch Settings

The following chart can also be found in the **DSU 56/64 User Manual** and on the sticker located on the bottom of the unit.

FUNCTION	SW POS	DOWN	UP
CS	1	NORMAL	ON
CS DELAY	2	SHORT	LONG
ANTI-STREAM	3	OFF	ON
CD	4	NORMAL	ON
SR	5	ON	NORMAL
RDL	6	ENABLE	DISABLE
RATE	7	56K	64K
SCRAMBLER	8	ON	OFF