

## Overview




### WARNING!

Read all warnings, cautions, notes and installation instructions before installing or servicing this equipment.

The SDG-8632 is a carrier-class, dual-band, WiFi 6E Mesh AP designed to deliver top-end WiFi 6E performance, multi-gigabit wired and wireless throughput, and advanced service delivery capabilities.

Figure 1: SDG-8632 WiFi 6E Mesh AP

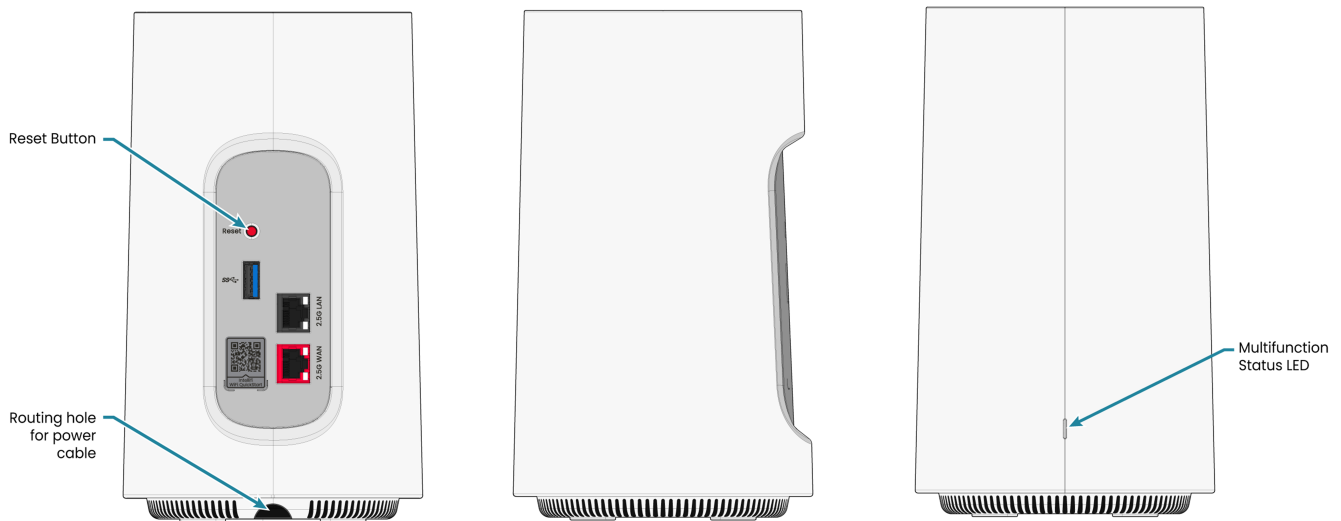

### WARNING!

A warning indicates a hazard that, if not avoided, could result in death, injury, or serious property damage.



### CAUTION!

A caution indicates a hazard that, if not avoided, could result in service interruption, damage to the equipment, or minor property damage.



### NOTE

A note highlights additional, but important, information or features.

## Features

The features of the SDG-8632 include the following:

- 2x 2.5 Gigabit Ethernet RJ-45 interfaces
- 4t4r 802.11ax @ 2.4GHz with up to 40 MHz channel bandwidth
- 4t4r 802.11ax 6GHz with up to 160 MHz channel bandwidth
- 4t4r 802.11ax 5GHz with up to 80 MHz channel bandwidth
- 1x USB 3.0 Type A interface
- 1x Reset button
- 1x Serial Console interface

This quick start describes how to install and connect to the device.

- [Installing the SDG-8632 Mesh AP](#)
- [Understanding the Status LEDs](#)
- [Logging Into the SDG-8632](#)
- [Product Specifications](#)

## Installing the SDG-8632 Mesh AP



### NOTE

Refer to the national, state and local electrical codes for the requirements for power, grounding, wiring, and installation methods.

### Package Contents

- Adtran's SDG-8632 Wi-Fi 6E Mesh AP
- 15V DC power adapter (USB-C)
- Ethernet cable
- Quick Install Guide



### CAUTION!

The product is intended for indoor use only. Ethernet and attached equipment are intended for use within the same building with equipotential bonding, and not intended to be placed in separate buildings or structures. Failure to deploy as described could result in permanent damage from lightning or other electrical events and voids the warranty. Furthermore, all connections from outside of the building must be disconnected prior to use.

### Prior to Installation

Before installing the equipment, inspect the device. If damage has occurred during shipping, file a claim with the carrier, and then contact Adtran Customer Support. For more information, refer to the product warranty available online at [https://adtran/wp\\_support\\_warranty](https://adtran/wp_support_warranty).

### Required Tools

No special tools are required for installing the SDG-8632.

### Mounting Options

The SDG-8632 can be placed on a desk or table. Be sure to route and secure the cables in a manner that will prevent damage. These options are described below.

### Desktop Installation

The SDG-8632 can be placed on a desk or table. Table 1 shows the recommended minimum distance (in feet and meters) between the device and household appliances to reduce interference.

**Table 1: Recommended Minimum Distance Between the SDG and Household Appliances**

Household Appliance	Recommended Minimum Distance (in feet and meters)
Microwave ovens	30 feet / 9 meters
Baby monitor – analog	20 feet / 6 meters
Baby monitor – digital	40 feet / 12 meters
Cordless phone – analog	20 feet / 6 meters
Cordless phone – digital	30 feet / 9 meters
Bluetooth devices	20 feet / 6 meters
ZigBee	20 feet / 6 meters



#### WARNING!

Ensure that the SDG-8632 does not come in contact with water or other liquids.




#### CAUTION!

Ensure that the SDG-8632 is not located in direct sunlight or next to any thermal obstructions.

### Supplying Power to the device

The SDG-8632 comes with a region specific AC to USB-C power adapter. Available regions include: North America, United Kingdom, European Union, and Australia/New Zealand. Power is supplied to the USB-C power input connector located on the bottom of the SDG as shown in this next figure.

**Figure 2: SDG Bottom View**

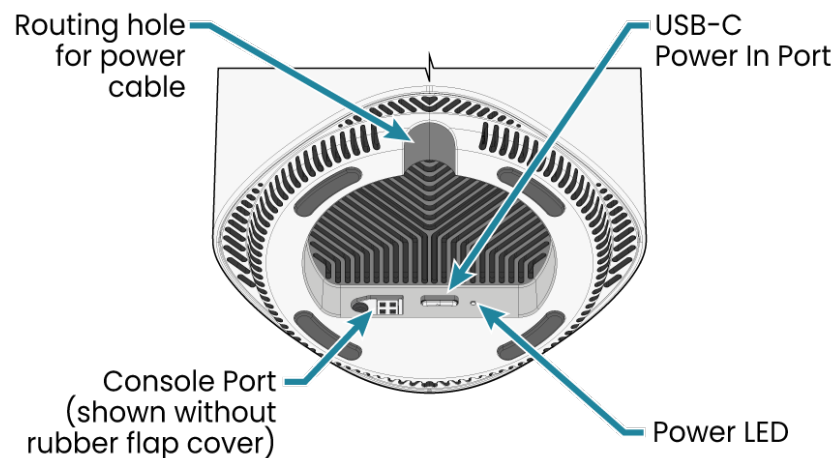

**NOTE** 3rd party USB-C power supplies are not recommended for use as they may not provide the required USB power delivery profile for the SDG-8632.

1. Connect the USB-C end of the power adapter to the USB-C Power In Port on the bottom of the device.
2. Plug the other end of the power adapter into the wall outlet.
3. The SDG will begin powering up immediately as the SDG-8632 has no on/off power switch.
4. Confirm that the power is connected properly by checking the **Power LED** located to the right of the Power In port.

LED			
Power	Green	Solid	Correct Power
	Red		Incorrect Power
	Off		No power

5. The Multifunction Status LED should be lit on the front of the device, as described in the following section "Multifunction Status LED".

## Subscriber Connections

The following subscriber connections are available on the SDG-8632:

- 2x 2.5 Gigabit Ethernet RJ-45 interfaces

To connect the Ethernet interfaces, refer to Figure 1 on page 1. Connect a Category 5E or better RJ-45 cable from the service provider Ethernet port to the red 2.5G WAN port on the SDG-8632. Next insert one end of a Category 5E or better RJ-45 cable into the black 2.5G LAN port and connect the other end to any local device requiring wired Ethernet service..

### NOTE

The **USB 3.0** host port is reserved for future use. This port currently provides +5 VDC for charging external device.

## Resetting the SDG

A reset button is available on the back of the SDG-8632 as shown in Figure 1 on page 1 and can be used to reboot or restore the device to factory defaults. To reboot the SDG-8632, press the Reset button on the back panel of the device for less than 5 seconds. To reset the device to factory defaults, press the Reset button for 5 seconds or longer.

## Understanding the Status LEDs

The multifunction status LED on the front of the SDG indicates the device and connectivity status. Table 2 defines the multifunction status LED state when running SmartOS.

**Table 2: Multifunction Status LED for SmartOS**

Color	LED State	Event
Blue	Solid	Cold boot
Red	Pulsing	Reboot and System Upgrade (persists over uboot)
Green	Pulsing	Linux booting up
Light Blue	Pulsing	Quick start
White	Solid	Controller WAN up, Internet
Amber	Pulsing	Controller WAN down, no Internet

Color	LED State	Event
Purple	Pulsing	Satellite Set Up
White	Solid	Satellite up
Red	Pulsing	Satellite up, fair signal
Amber	Pulsing	Satellite up, poor signal
White	Pulsing	Reverting

## Multifunction Status LED

The multifunction status LED on the front of the unit indicates the device status. [Table 3](#) defines the multifunction status LED state when running SmartOS.

**Table 3: Multifunction Status LED for SmartOS**

Color	LED State	Event
Blue	Solid	Cold boot
Red	Pulsing	Reboot and System Upgrade (persists over uboot)
Green	Pulsing	Linux booting up
Light Blue	Pulsing	Quick start
White	Solid	Controller WAN up, Internet
Amber	Pulsing	Controller WAN down, no Internet
Purple	Pulsing	Satellite Set Up
White	Solid	Satellite up
Red	Pulsing	Satellite up, fair signal
Amber	Pulsing	Satellite up, poor signal
White	Pulsing	Reverting

## Ethernet Status LEDs

The Ethernet status LEDs indicate the status of the Ethernet interfaces.

LED	Port	Color	Description
Ethernet	2.5 Gbps	Left Green	Speed is 2.5 Gbps
		Right Green	Speed is 1 Gbps
		Right Amber	Speed is 100 Mbps

## Quick Setup for the SDG-8632

For devices with SmartOS installed, scan the QR code labeled WiFi QuickStart located on the back of the unit. You will be presented with a series of self-guided steps to choose your account password, select gateway or access point mode, and configure the Wi-Fi SSID and passphrase. The specified account password will be used when initially logging into the GUI on the SDG.

## Logging Into the SDG-8632

### Using SmartOS

A browser-based user interface (GUI) is used to manually configure the SDG-8632. The following steps describe how to connect and login to the device:

1. Ensure your computer is connected to the SDG-8632 either via Wi-Fi or Ethernet connection to one of the LAN ports.
2. Configure your computer's network interface to acquire an IP address automatically using DHCP.
3. Open a web browser and enter the following: **http://router** or **http://setup**. A sign-in page should appear. If you are unable to connect to the SDG-8632 using either of these shortcuts, you can also enter the IP address of the unit. The default IP address is **192.168.1.1**.
4. The default username is **admin**. The password is the account password that was specified during the quick setup.



#### NOTE

If you have forgotten the password for this device, select **Forgot password?** and follow the instructions to reset the gateway configuration to the factory defaults. Next, follow the instructions under [Using SmartOS](#).

5. Select **Sign In**. The **Dashboard** page appears, showing data about the system.

## Product Specifications

### Electrical

Power is provided by a region specific AC to 15V DC power adapter (USB-C) that is included with the SDG-8632. The nominal output is 15V DC  $\pm 5\%$  with a maximum current rating of 3.0 Amps. Regional plug adapter specifications are as follows:



#### NOTE

It is strongly suggested that the power supply (a 5.9-foot (1.8 m) power cord) included with the SDG-8632 be connected to a surge suppressor device which can have its own extension cable. The surge protection device should provide L-N, L-G, and N-G protection. It is also recommended that the device contains a visual 'GOOD' indicator.

Region	Power	Connector Type	Certifications
North America	120VAC @ 60Hz	NEMA 1-15 Type A, right-angle orientation	cULus Listed
United Kingdom	230VAC @ 50Hz	Type G	UKCA Listed
European Union	220~240VAC @ 50Hz	Type C/F	CE compliant with NB code, TÜV
Australia/New Zealand	220~240VAC @ 50Hz	Type I, right-angle orientation	RCM Tick Mark, ERAC Listed

## Environment

- Operating Temperature: 41°F to 104°F (5°C to 40°C)
- Storage Temperature: -13°F to 158°F (-25°C to 70°C)
- Transportation Temperature: -40°F to 158°F (-40°C to 70°C) any humidity
- Operating Humidity: 5 to 85 percent, non-condensing



### NOTE

Changes or modifications not expressly approved by Adtran will void the warranty.

## Compliance

This product meets the following compliance requirements:

- UL /cUL Listed
- FCC Part 15, Class B
- FCC Part 11, 2.1091 (MPE)
- ICES-003 (Class B)
- ACMA/RCM
- IEC 62368-1
- EN 62368-1
- AS/NZS 62368.1
- ErP
- RoHS Compliant
- UKCA



### NOTE

Changes or modifications not expressly approved by Adtran will void the warranty.

## Safety and Regulatory



### CAUTION!

- Connect the DC power input to an approved Limited Power Source (LPS) power supply ONLY.
- This product is intended to operate in ambient temperatures up to 40°C.

**NOTE**

This product meets the following compliance requirements:



- This equipment contains no parts that can be serviced by the user.
- This product meets EU RoHS Directive. Refer to [www.adtran.com/environmental](http://www.adtran.com/environmental) for further information on RoHS/WEEE.
- This product is NRTL Safety Listed to the applicable UL/CSA Standards.
- This product has also been evaluated to applicable international standards as indicated by CE, UKCA, and RCM marking.
- The AC branch circuit socket-outlet must be installed near the equipment and must be easily accessible.
- The RJ-45 jacks are not used for telephone line connection.

## Regulatory Compliance

This section includes user requirements for operating this product in accordance with National laws for usage of radio spectrum and operation of radio devices. Failure of the end-user to comply with the applicable requirements may result in unlawful operation and adverse action against the end-user by the applicable National regulatory authority.

This product's firmware limits operation to only the channels allowed in a particular Region or Country. Therefore, all options described in this user's guide may not be available in your version of the product.

### Europe – EU Declaration of Conformity

Products bearing the marking comply with the following EU directives:

- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- EMC Directive 2014/53/EU
- ErP Directive reference: 2009/125/EC
- RoHS Directive 2015/863/EU
- WEEE Directive reference: 2012/19/EU

This product complies with the requirements of the following EU Directive:

- RED 2014/53/EU

Compliance with these directives implies conformity to harmonized European standards that are noted in the EU Declaration of Conformity.

For indoor use only. Valid in all EU member states, EFTA states, and Switzerland.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 - 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

150 ~ 5350 MHz is limited to indoor used in below countries.

<b>Note</b>	BE	BG	CZ	DK	DE	EE	IE	EL	ES	FR	HR
	IT	CY	LV	LT	LU	UK	MT	NL	AT	PL	PT
	RO	SI	SK	FI	SE	UK(NI)	LI	IS	NO	TR	CH



## FCC Requirements for Operation in the United States

### ***FCC Information to User***

This product does not contain any user serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals.

### ***FCC Guidelines for Human Exposure***

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 25 cm between the radiator and your body.

This device must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

### ***FCC Declaration of Conformity***

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

### ***FCC Radio Frequency Interference Warnings & Instructions***

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The spec for this product also lists FCC CFR Part 11, 2.1091 (MPE).

The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet.

## **CAN ICES-3(B)/NMB-3(B)**

### **Canadian Department of Communications Radio Interference Regulations**

This digital apparatus (Wi-Fi 6E Mesh AP Model SDG-8632) does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

### **Industry Canada**

This device complies with RSS-247 of the Industry Canada Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**ATTENTION!**

**Déclaration d'exposition aux radiations:** Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

**CAUTION!**

**Radiation Exposure Statement:** This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This radio transmitter (IC: 2250A-17600073) has been approved by Industry Canada to operate with the antenna types listed below. Antenna types not included in this list are strictly prohibited for use with this device.

RSS-102 (MPE)

**ATTENTION!**

- i. les dispositifs fonctionnant dans la bande 5150-5250MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- ii. le gain maximal d'antenne permis pour les dispositifs utilisant les bandes de 5250 à 5350MHz et de 5470 à 5725MHz doit être conforme à la limite de la p.i.r.e;
- iii. le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5725 à 5850MHz) doit être conforme à la limite de la p.i.r.e. spécifiée pour l'exploitation point à point et l'exploitation non point à point, selon le cas;
- iv. les pires angles d'inclinaison nécessaires pour rester conforme à l'exigence de la p.i.r.e. applicable au masque d'élévation, et énoncée à la section 6.2.2 3), doivent être clairement indiqués.

**CAUTION!**

- i. The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- ii. The maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the EIRP limits specified for point-to-point and non-point-to-point operation as appropriate.
- iii. The worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in Section 6.2.2(3) shall be clearly indicated.
- iv. Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

**Australia/New Zealand - ACMA/RCM**

AS/NZS CSPR 32, Class B (EMC), AS/NZS 4268 (RF), RCM mark with R-NZ

Documentation for Adtran Network Solutions products is available for viewing and download directly from the Adtran Support Community website. Go to:

<https://supportcommunity.adtran.com>

For Adtran training inquiries, visit:

<https://adtran.com/training>

Access additional safety information and product documentation using the QR code or website link below.



<http://adtran.com/sdg-info>

**Warranty:** Adtran will replace or repair this product within the warranty period if it does not meet its published specifications or fails while in service. Warranty information can be found online at <https://adtran.com/warranty>.

**Trademarks:** Brand names and product names included in this document are trademarks, registered trademarks, or trade names of their respective holders.

Copyright © 2024 Adtran, Inc. All Rights Reserved.

**Adtran Customer Care:**

**From within the U.S.**

1.888.423.8726

**From outside the U.S.**

+1 256.963.8716

**Pricing and Availability**

1.800.827.0807



**CAUTION!**  
SUBJECT TO ELECTROSTATIC DAMAGE  
OR DECREASE IN RELIABILITY  
HANDLING PRECAUTIONS REQUIRED