

DESCRIPTION


The Small Form-Factor Pluggable (SFP) Gigabit Ethernet, Single-Fiber is a bidirectional SFP that plugs into an Optical Network Unit (ONU) designed to accept SFPs. The SFP provides a single optical interface to the GigE physical interface. Installed into an appropriate ONU, the SFP provides a Gigabit Ethernet interface to the supporting system.

NOTE

To ensure compatibility, refer to the documentation provided with the ONU.

NOTICE

In a deployment consisting of an ONU with a 1200487G20 SFP installed; the Optical Loop Termination (OLT) should have a complementary 1442120G1 SFP installed.

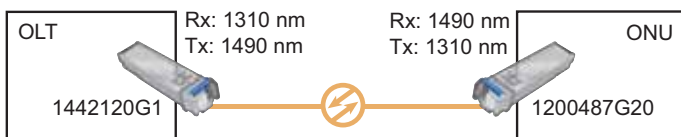

The following features are supported on the SFP:

- ◆ 1000Base-LX 1310 nm Transmitter
- ◆ 1000Base-LX 1490 nm Receiver
- ◆ Optical distance: 20 km maximum

⚠ CAUTION

Due to compliance certification requirements, only SFPs supplied by ADTRAN should be used. ADTRAN cannot certify system integrity with other SFPs.

Operational Specifications

- ◆ Optical Specifications:
 - ◇ Transmit wavelength: 1310 nm
 - ◇ Receive wavelength: 1490 nm
 - ◇ Optical transmit level: -8 dBm to -3 dBm
 - ◇ Optical receive level: -22 dBm to -3 dBm
 - ◇ Optical distance: 20 km
 - ◇ Optical connectors: LC
- ◆ Extended Environmental Support:
 - ◇ Operational temperature range: -40°C to +85°C
 - ◇ Storage temperature range: -40°C to +85°C
 - ◇ Relative humidity to 95%, noncondensing

INSTALLATION

Prior to installation, inspect the SFP. If damage has occurred during shipping, file a claim with the carrier, and then contact ADTRAN Customer Support. For more information, refer to "Warranty".

To install the SFP into an appropriate module, complete the following steps:

1. Insert the SFP into the SFP cage on the circuit board of the host module with the latch handle facing outward. Slide the SFP all the way into the cage.

NOTE

The latch on the SFP is for removal only. When removing the SFP, rotate the latch away from the SFP, the SFP should slide easily out of the cage.

2. Exert adequate pressure to ensure the SFP is completely seated in the SFP cage.
3. Do not remove the connector plug until the optical fiber connection is made.

NOTICE

It is recommended that the connector plug remain on whenever the transceiver optical fiber connector is not inserted.

4. Continue the installation and turn-up of the host module using the instructions in the Job Aid provided with the module, or use the Installation and Maintenance Guide (I&M) available online at www.adtran.com.

SAFETY AND REGULATORY COMPLIANCE

CAUTION

Electrostatic Discharge (ESD) can damage electronic modules. When handling modules, wear an antistatic discharge wrist strap to prevent damage to electronic components. Place modules in antistatic packing material when transporting or storing. When working on modules, always place them on an approved antistatic mat that is electrically grounded.

The SFP is NRTL Listed to the applicable UL standards. The SFP meets or exceeds all the applicable requirements of NEBS, Telcordia GR-63-CORE, and GR-1089-CORE. The SFP is intended for deployment in Central Office type facilities, EEEs, EECs, and locations where the NEC applies (for example, Customer Premises) and is intended to be installed by trained service personnel. Install the SFP in an ADTRAN product located in a restricted access location.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by ADTRAN could void the user's authority to operate this equipment.

CAUTION

- ◆ Per GR-1089-CORE the ADTRAN system that the SFP is being deployed in is designed and intended for installation as part of a Common Bonding Network (CBN). The ADTRAN system that the SFP is being deployed in is not designed nor intended for installation as part of an Isolated Bonding Network (IBN).
- ◆ Per GR-1089-CORE Section 9, the SFP does not have an internal DC connection between battery return and frame ground. The SFP can be installed in a DC-I (isolated) or DC-C (common) installation. For installations where other cards or the host system have internal connections between battery return and frame ground, the system would be intended for deployment only in a DC-C installation.
- ◆ The ADTRAN system chassis frame ground terminal must be connected to an earth ground to ensure that the metal enclosure of the SFP is properly grounded via the backplane connector.

NOTE

The Gigabit Ethernet port(s) are optical and therefore are not classified as any type of port as defined in Appendix B of GR-1089-CORE Issue 4.

The SFP is designed to meet the following environmental classes:

- ◆ ETSI EN 300 019-1-1 "Classification of environmental conditions; Storage," Class 1.2
- ◆ ETSI EN 300 019-1-2 "Classification of environmental conditions, Transportation," Class 2.3
- ◆ ETSI EN 300 019-1-3 "Classification of environmental conditions, Stationary use at weather-protected locations," Class 3.3

The equipment is designed to function without degradation during exposure to all test severities per Class 3.3.

Warranty: ADTRAN will replace or repair this product within the warranty period if it does not meet its published specifications or fails while in service. Warranty information can be found online at www.adtran.com/warranty.



ADTRAN CUSTOMER CARE:
From within the U.S. 1.800.726.8663
From outside the U.S. +1 256.963.8716
PRICING AND AVAILABILITY 1.800.827.0807

